

Guide for replacement of FLXE-QL block & driving device

更换配件指导----FLXE-QL 搅拌层皮带轮



Before replacement, must unplug of mixing machine.

先断开电源插头，再开始更换配件

For safety, worker must wear gloves.

为确保安全，请操作人员全程佩戴手套。

1st step: Open the cover of shaft, take the shaft kit as following pictures

第一步： 如图示，拆卸传动轴护板，拆卸传动轴。



2nd step: Open the cover of shelf, take the broken QL block apart.

第二步： 打开搅拌层盖板，拆卸损坏的皮带轮。



Guide for replacement of FLXE-QL block & driving device

更换配件指导----FLXE-QL 搅拌层皮带轮



3rd step: Install the new QL block, you will hear “KADA”, the one is at right position.

第三步: 如图示, 安装新皮带轮, 听到卡子“咔哒”声, 皮带轮安装正确入位。



4th step: Install the cover of shelf, the transmission shaft, and the cover of shaft.

第四步: 复位搅拌层盖板, 复位轴及轴护板。

