

Guide for replacement of FLXE Standard block

更换配件指导----FLXE 搅拌层标准传动块



Before replacement, must unplug of mixing machine.

先断开电源插头，再开始更换配件

For safety, worker must wear gloves.

为确保安全，请操作人员全程佩戴手套。

1st step: Open the cover of shaft, take the shaft kit as following pictures

第一步：如图示，拆卸传动轴护板，拆卸传动轴。



2nd step: Open the cover of shelf, take the broken block apart.

第二步：打开搅拌层盖板，拆卸损坏的传动块。



Guide for replacement of FLXE standard block

更换配件指导----FLXE 搅拌层标准传动块

3rd step: Install new block with screws, pay attention the belt goes around the tension pulley.

第三步: 安装传动块，螺钉拧紧，装好皮带，注意 1 升罐层和大罐层皮带绕行张紧轮的走行方式。



0.5L/1L Small tin shelf belt goes around

0.5 升/ 1 升小罐层皮带绕行图



2.5L -5L big tin shelf belt goes around

2.5 升-5 升 大罐层皮带绕行图



4th step: Install the cover of shelf, the transmission shaft, and the cover of shaft.

第四步: 复位搅拌层盖板，复位轴及轴护板。

