

Guide for replacement of FLXE Receive pulley

更换配件指导---- FLXE 电机座从动轮



Before replacement, must unplug of mixing machine.

先断开电源插头，再开始更换配件

For safety, worker must wear gloves.

为确保安全，请操作人员全程佩戴手套。

1st step: Take the control box apart, take the motor kit apart, take the broken belt apart.

第一步：拆卸控制盒，拆卸电机及电机托盘，使电机托盘底部暴露在操作台面，拆卸故障皮带；




Guide for replacement of FLXE Receive pulley

更换配件指导---- FLXE 电机座从动轮



2nd step: Install the new receive pulley, and screw the special screw which is glued on.

第二步: 安装从动轮，如下图，带胶螺钉固定从动轮中部。

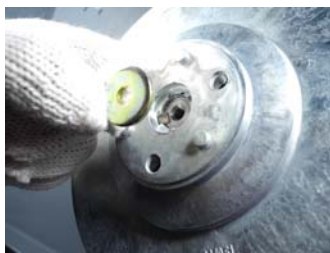

3rd step: Install the new belt and adjustment tightness of belt.

第三步: 安装电机皮带，调整电机底部的 4 个螺钉，以使皮带松紧度达到最佳工作状态，拧紧螺钉。



Guide for replacement of FLXE Receive pulley

更换配件指导---- FLXE 电机座从动轮



4th step: Install the motor kit with mixing machine, install the transmission shaft and the cover of shaft, install the control box.

第四步：将电机组件安装到搅拌机位置，安装传动轴及轴护板，安装控制盒到立架上。

