

## Guide for replacement of FLXE Small can shelf belt

### 更换配件指导---- FLXE 小罐搅拌层皮带



**Before replacement, must unplug of mixing machine.**

先断开电源插头，再开始更换配件

**For safety, worker must wear gloves.**

为确保安全，请操作人员全程佩戴手套。

**1<sup>st</sup> step:** Open the cover of shaft, take the shaft kit as following pictures

第一步：如图示，拆卸传动轴护板，拆卸传动轴，打开搅拌层盖板。



**2<sup>nd</sup> step:** Loose the tension pulley blow the shelf at right, take the broken belt apart,

第二步：拧松搅拌层右侧底部张紧轮，拆卸故障皮带；



## Guide for replacement of FLXE Small can shelf belt

### 更换配件指导---- FLXE 小罐搅拌层皮带

**3<sup>rd</sup> step:** Install the new belt of shelf, pay attention the belt goes around the tension pulley

**第三步:** 安装搅拌层新皮带，如图所示：注意皮带绕行张紧轮方式。



**4<sup>th</sup> step:** Install the cover of shelf, the transmission shaft, and the cover of shaft.

**第四步:** 复位搅拌层盖板，复位轴及轴护板。

